

You make the installation for Win2000 and XP-drivers as follows: First you install the 2 software diskettes. Then you will install the driver. Connect the printer and see that the two LED's are shining. Then do it as follows:

START – SETTINGS – ADD NEW PRINTER, and follow the instructions. By disc you select the WIN2000 driver for Win2000 and WinXP for XP. Double click on the correct driver, and you see now OEMSETUP. OK. Select now **Dr. Label 4 inch**, and follow the instruction till the testpage is printed. (by XP CONTINUE)

Click in the **pop-up menu in the blank space** of the drivers screen with the right click on the mouse, **BUT NOT ON A PRINTER DRIVER**. Then click on server properties. Then select: **create a NEW FORM**. Type: ribbon 70mm after form description (for creating a ribbon of 70mm).By measurements: paper size, you type: **By width: 7 (cm) By height: 69,8 (cm)**

## **SAVE FORM.**

### **DO THE SAME FOR CREATING OTHER WIDTHS.**

Close the screen.

Right click on the Dr Label 4 inch driver.

Click properties. Click preference settings. Advantage. Click on **PAPER/Format**. Select here **one of the ribbon widths** that you have created. (45, 70...)

PRINT/QUALITY: select: **DARKNESS: 9**, OK.

PAPER/QUALITY: select: **T/T Continuous Media**. OK.

DEVICE SETTING: T/T continuous Media: **select here the same width that you have selected before**. OK.

Close all. This is the method to create your ribbon widths for WINDOWS 2000 OR XP.

### **OPEN NOW THE RIBBON PRINT PROGRAM.**

You can prepare your ribbons as before, or see your manual.

**Only by changing the ribbon widths:** right click on your mouse, and then select **FORMAT:**

**LABEL:** Width: 45, 70, 100 or other widths; Height: 698; Pro Line: 1; Pro Column: 1.

**PAGE** (page dim mm), **select the correct ribbon width** (ribbon 45, 70, 100 or other created measures), then under in the screen click on **SETTINGS**, you must see now **T/T CONTINUOUS MEDIA: IN BLEU**, click **Advantage:** and select by **PAPER/FORMAT** the same width (**45, 70 or 100**).

Then you do OK, OK, till you are returned back into the ribbon screen, where you can begin typing the text to print on your ribbon. See the instruction manual.

**WE WISH YOU GOOD LUCK...**